


Pop-Up Ball Rod

INSTALLATION INSTRUCTIONS

⚠ CAUTION: DO NOT INSTALL THIS PRODUCT UNTIL YOU READ AND UNDERSTAND ALL INSTRUCTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY, PROPERTY DAMAGE OR PRODUCT FAILURE.

1. Unthread screw on clevis and remove lift rod.
2. Slide clevis and spring clip off of ball rod.
3. Unthread retaining nut and slide out gasket and ball rod.
4. Select replacement pivot ball that best matches the size of the original pivot ball, and screw onto the threaded end of rod.
5. Slide gasket and retaining nut onto ball rod. Place new ball rod into drain body inlet. Tighten retaining nut. **DO NOT OVER TIGHTEN.**
6. Place first hole of spring clip onto ball rod. Then position clevis behind spring clip taking into account faucet height. Slide last hole of spring clip onto ball rod.
7. Slide lift rod through hole of faucet and both holes of clevis. Tighten screw at top of clevis to hold lift rod in place. **DO NOT OVER TIGHTEN.**

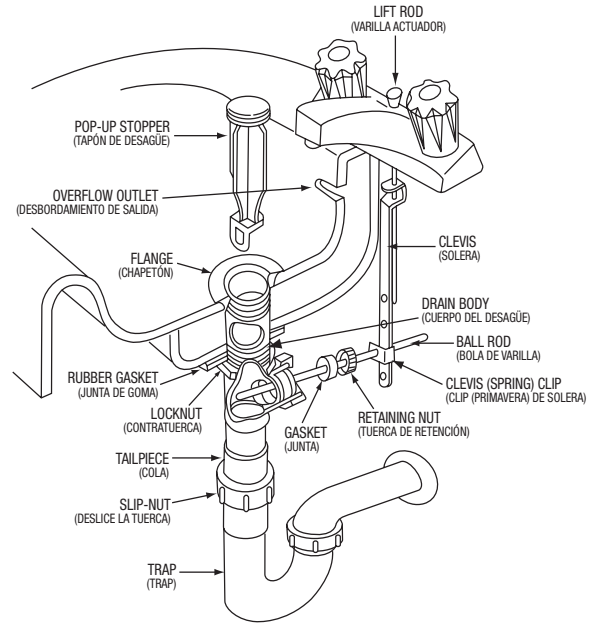

Varilla de rosca emergente

INSTRUCCIONES DE INSTALACIÓN

⚠ PRECAUCIÓN: NO INSTALE ESTE PRODUCTO HASTA QUE LEA Y COMPRENDA TODAS LAS INSTRUCCIONES. EL INCUMPLIMIENTO DE ESTAS INSTRUCCIONES PUEDE OCASIONAR LESIONES PERSONALES, DAÑOS A LA PROPIEDAD O FALLAS DEL PRODUCTO.

1. Afloje la tuerca de la solera y retire la bola varilla.
2. Retire la solera y el seguro de la bola varilla.
3. Desenrosque la tuerca de retención y retire el empaque y la bola varilla.
4. Seleccione balón de pivote que mejor coincida con el tamaño de la bola de pivote original, y el tornillo en el extremo roscado de la varilla.
5. Deslice el empaque y la tuerca de retención en la bola varilla nueva. Coloque la bola varilla en el cuerpo del desagüe, apriete la tuerca de retención. **NO APRIETE DEMASIADO.**
6. Coloque el primer orificio del seguro en la bola varilla. Coloque la solera detras de seguro, tomando en consideración la altura dellavabo. Deslice el último orificio del seguro en la bola varilla.
7. Deslice la varilla por el orificio del lavabo y ambos orificios de la solera. Apriete el tornillo de la solera para fijar la varilla en su lugar. **NO APRIETE DEMASIADO.**

BrassCraft®

Brasscraft Manufacturing Co., 39600 Orchard Hill Place Novi, Michigan 48375-5331
TOLL-FREE: 877.272.7755 FAX: 248.305.6011 www.brasscraft.com

Manufacturer assumes no responsibility for failure due to improper installation.

©2019 Brasscraft Manufacturing Company, Novi, MI 48375-5331 U.S.A.

All Rights Reserved. www.brasscraft.com BrassCraft® brand is a trademark of Brasscraft Mfg. Co.
El fabricante no asume ninguna responsabilidad si la instalación no se hace de acuerdo al instructivo.
BrassCraft® brand es una marca registrada de Brasscraft Mfg. Co.